

Fujitsu Fault Codes

Error Detail	Indoor LED Display Flashes			Wired RC
	Operation	Timer	Economy	
Serial communication error	1	1	Continuous	11
Wired RC communication error	1	2	Continuous	12
Network communication error	1	4	Continuous	14
Check run unfinished	1	5	Continuous	15
Transmission/Peripheral connect error	1	6	Continuous	16
Refrigeration circuit address setting error	2	1	Continuous	21
Indoor unit capacity error	2	2	Continuous	22
Combination error	2	3	Continuous	23
Connection unit number error	2	4	Continuous	24
Address setting error	2	6	Continuous	26
Master/Slave unit set-up error	2	7	Continuous	27
Connection unit number error in WRC circuit	2	9	Continuous	29
Power supply interruption error	3	1	Continuous	31
Indoor PCB EPPROM error	3	2	Continuous	32
Manual auto switch error	3	5	Continuous	35
Indoor unit WRC communication error	3	10	Continuous	3A
Inlet air temp sensor error	4	1	Continuous	41
Indoor Heat-Ex middle temp sensor error	4	2	Continuous	42
Indoor unit fan motor error	5	1	Continuous	51
Indoor EEV error	5	2	Continuous	52
Drain pump error	5	3	Continuous	53
Damper error	5	7	Continuous	57
Intake grille error	5	8	Continuous	58
Indoor unit error	5	15	Continuous	5U
Outdoor PCB/communication error	6	2	Continuous	62
Inverter error	6	3	Continuous	63
Active filter/PFC circuit error	6	4	Continuous	64
Trip terminal 'L' error	6	5	Continuous	65
Display PCB/communication error	6	10	Continuous	6A
OU Discharge temp sensor error	7	1	Continuous	71
Compressor temp sensor error	7	2	Continuous	72
OU Heat-Ex liquid temp sensor error	7	3	Continuous	73
OU Ambient temp sensor error	7	4	Continuous	74
OU Suction ref temp sensor error	7	5	Continuous	75
2/3 way valve temp sensor error	7	6	Continuous	76
OU Heat sink temp sensor error	7	7	Continuous	77
Sub-cool inlet/outlet temp sensor error	8	2	Continuous	82
OU Liquid pipe temp sensor error	8	3	Continuous	83
OU current sensor error	8	4	Continuous	84
HP/LP pressure sensor/switch error	8	6	Continuous	86
OU Current trip detection	9	4	Continuous	94
Compressor rotor location detection error	9	5	Continuous	95
OU fan motor error	9	7	Continuous	97
OU fan motor 2 error	9	8	Continuous	98
4-way valve error	9	9	Continuous	99
Coil (expansion valve) error	9	10	Continuous	9A
Outdoor unit error	9	15	Continuous	9U
OU Abnormal discharge temp error	10	1	Continuous	A1
Abnormal compressor temp error	10	3	Continuous	A3
High Pressure error	10	4	Continuous	A4
Low pressure error	10	5	Continuous	A5
VRF Branch box error	13	1	Continuous	J1
8-Way Multi branch box error	13	2	Continuous	J2
Accessories	PCB LED	PCB LED		WRC
VRF RB: Cable crossed OU/RB - IU/RB	on solid	on solid	-	-
VRF RB: Coms/Main PCB error	on solid	Continuous	-	-
WRC: Incompatible IU connected	-	-	-	C0:15
WRC: Indoor - WRC comms error	-	-	-	C0:12