


DISASSEMBLY ILLUSTRATION & PARTS LIST


OUTDOOR UNIT

Models : AJY040LCLBH/ AJH040LCLBH
 AJY045LCLBH/ AJH045LCLBH
 AJY054LCLBH/ AJH054LCLBH

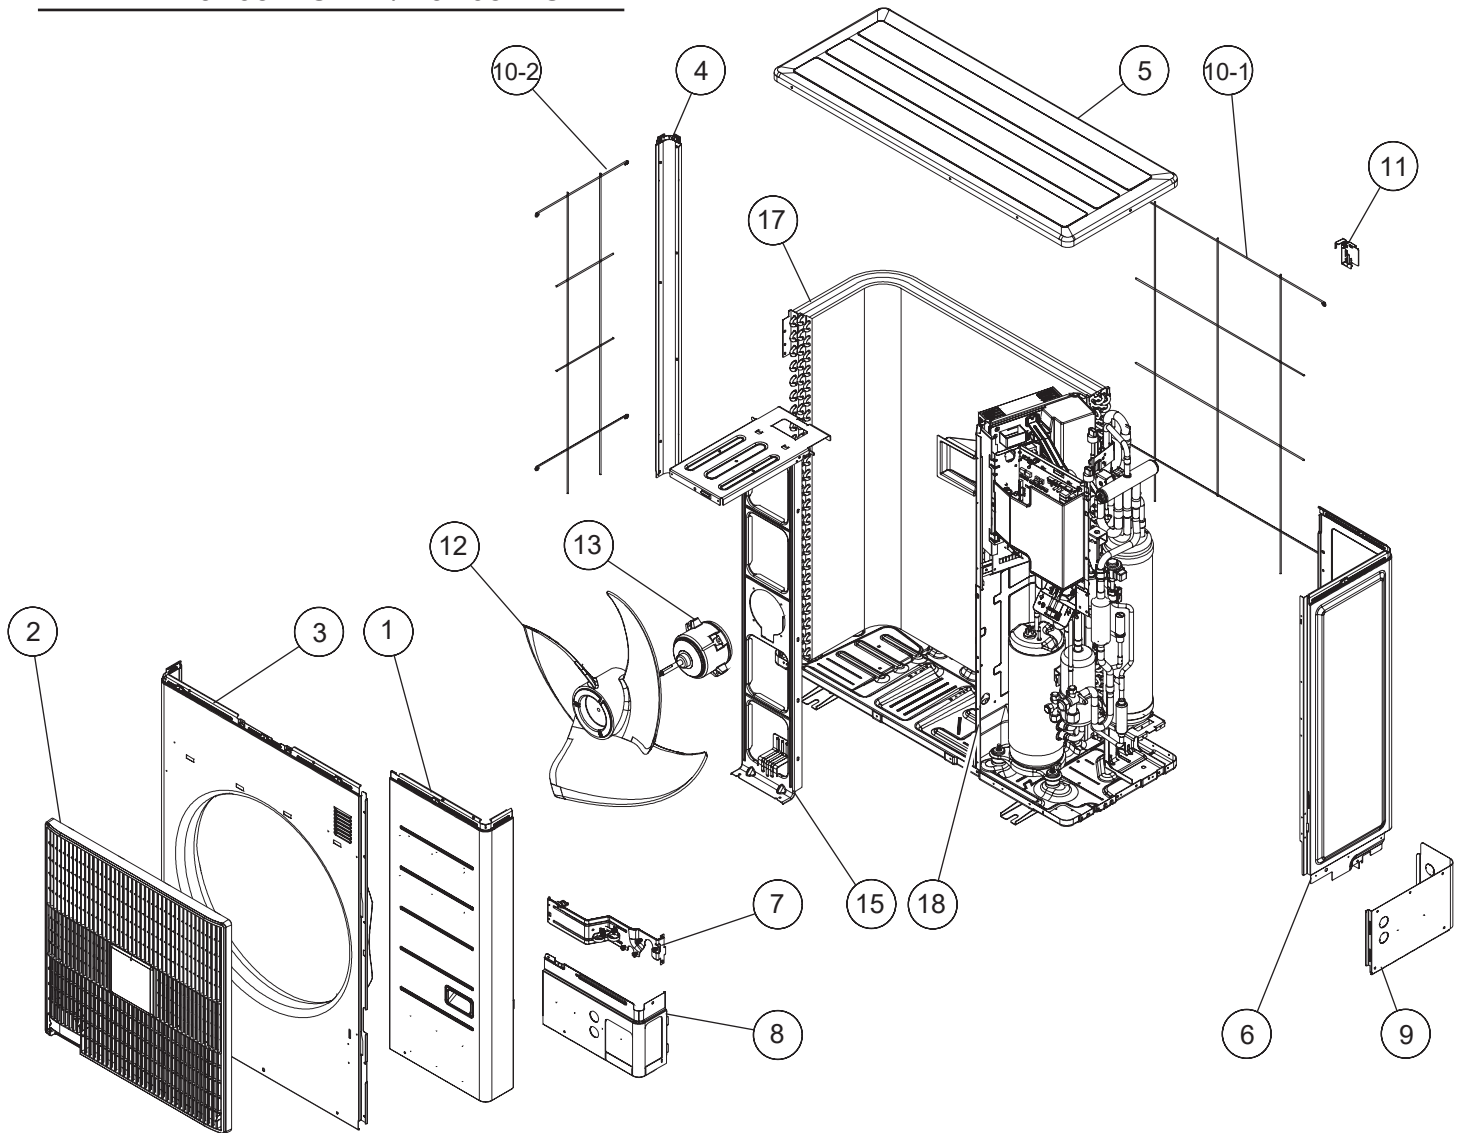


Ref No.	Description	Parts No.		
		AJ*040LCLBH	AJ*045LCLBH	AJ*054LCLBH
1	SERVICE PANEL SUB ASSY	9380571018	9380571018	9380571018
2	BLOW GRILL	9380955009	9380955009	9380955009
3	FRONT PANEL SUB ASSY	9380569039	9380569039	9380569039
4	CABINET LEFT	9380968009	9380968009	9380968009
5	TOP PANEL SUB ASSY	9379416030	9379416030	9379416030
6	CABINET RIGHT SUB ASSY	9380570011	9380570011	9380570011
7	PIPE COVER REAR	9380537007	9380537007	9380537007
8	PIPE COVER FRONT	9378805019	9378805019	9378805019
9	VALVE PLATE	9379409018	9379409018	9379409018
10-1	PROTECTIVE NET (REAR) ASSY	9378926059	9378926059	9378926059
10-2	PROTECTIVE NET (LEFT) ASSY	9378928022	9378928022	9378928022
11	THERMO HOLDER	9332505009	9332505009	9332505009
12	PROPELLER FAN	9379414005	9379414005	9379414005
13	MOTOR,DC BRUSHLESS	9603496012	9603496012	9603496012
15	MOTOR BRACKET SUB ASSY	9380566021	9380566021	9380566021
17	CONDENSER SUB ASSY	9374420643	9374420643	9374420643
18	SEPARATE WALL SUB ASSY	9380567110	9380567110	9380567110
	LABEL (FUJITSU)	9380477006	9380477006	9380477006
	LABEL (GENERAL)	9378949003	9378949003	9378949003
	LABEL (AIRSTAGE)	9380479000	9380479000	9380479000

Models : AJY040LCLBH/ AJH040LCLBH
 AJY045LCLBH/ AJH045LCLBH
 AJY054LCLBH/ AJH054LCLBH

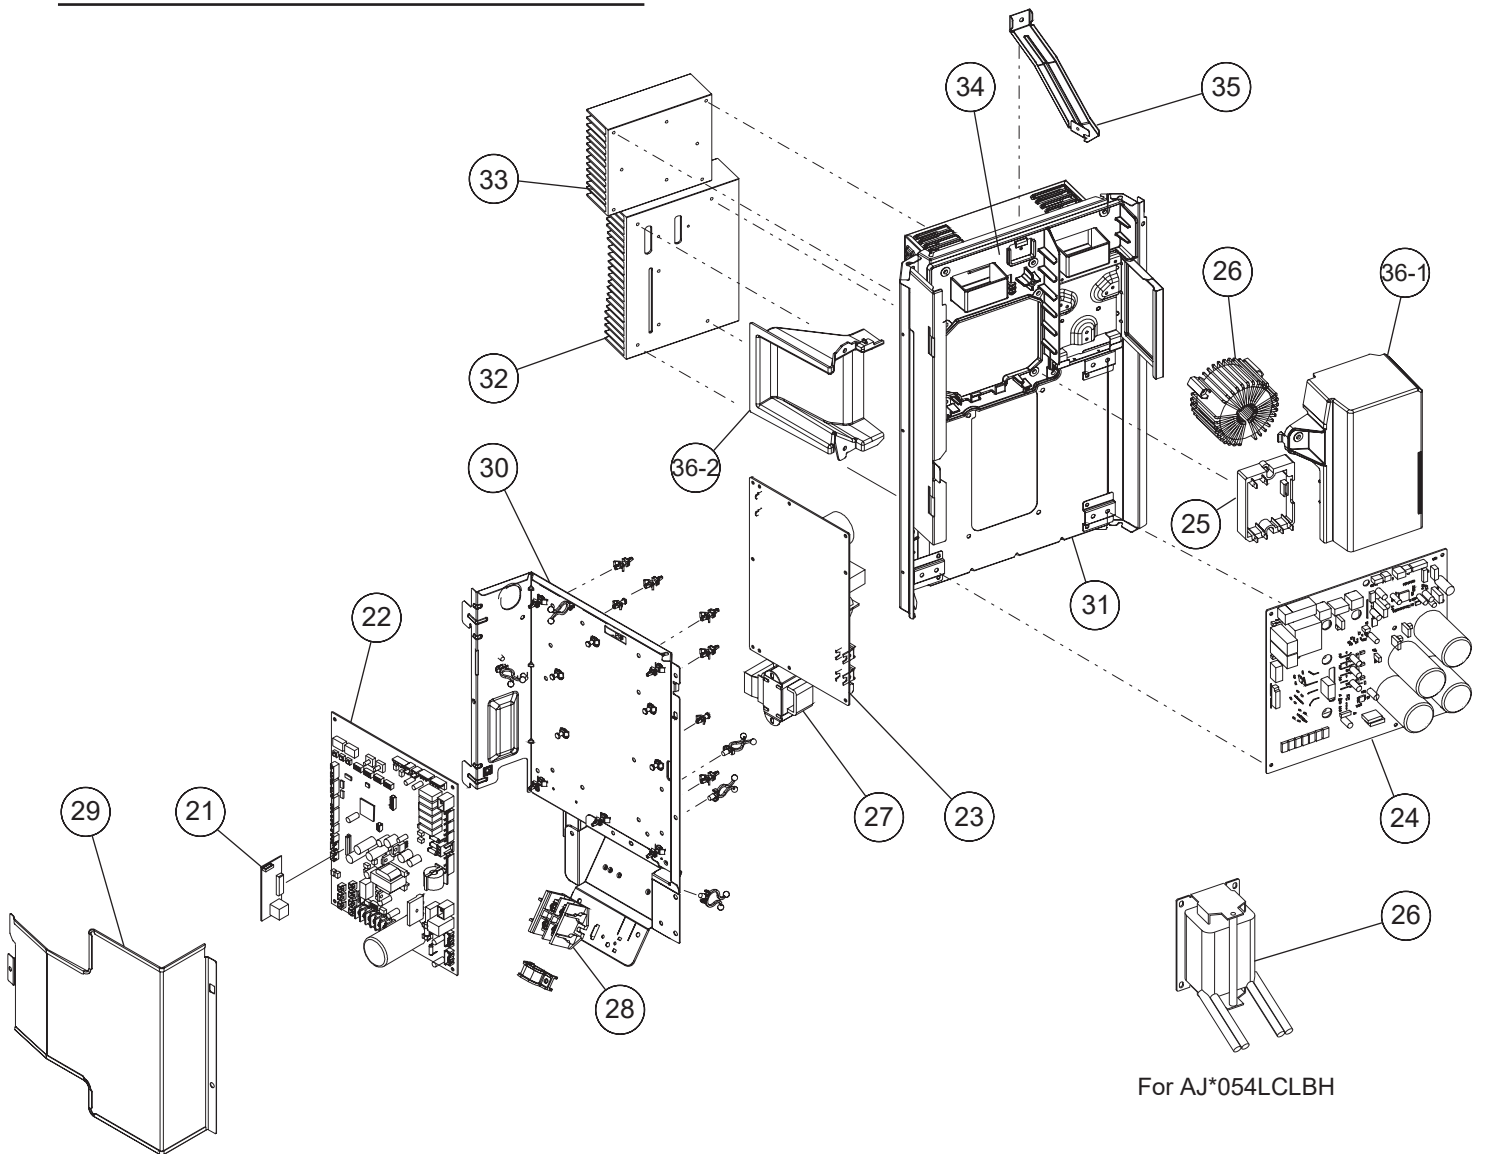

Ref No.	Description	Parts No.		
		AJ*040LCLBH	AJ*045LCLBH	AJ*054LCLBH
21	COMMUNICATION PCB	9707774023	9707774023	9707774023
22	MAIN PCB ASSY	9708853116	9708853116	9708853116
23	FILTER PCB ASSY	9709911006	9709911006	9709911013
24	INVERTER PCB ASSY (SERVICE)	9709680285	9709680285	9709680292
25	ACTPM	9708920009	9708920009	9708590004
26	CHOKE COIL	9900624019	9900624019	9900592011
27	REACTOR ASSY	9900481025	9900481025	9900481025
28	TERMINAL	9900428105	9900428105	9900428105
29	CONTROL COVER SUB ASSY	9378930025	9378930025	9378930025
30	CONTROL BOX (MAIN) ASSY	9380543008	9380543008	9380543008
31	CONTROL BOX (INV) ASSY	9380971023	9380971023	9380971023
32	HEAT SINK A	9380483007	9380483007	9380483007
33	HEAT SINK B	-----	-----	9380980001
33	HEAT SINK C	9380980018	9380980018	-----
34	HOLDER (HEAT SINK)	9380981015	9380981015	9380981015
35	BRACKET CONTROL BOX B	9380978008	9380978008	9380978008
36-1	DUCT A	9380961000	9380961000	-----
36-2	DUCT D	9380959007	9380959007	9380959007

Models : AJY040LCLBH/ AJH040LCLBH
AJY045LCLBH/ AJH045LCLBH
AJY054LCLBH/ AJH054LCLBH

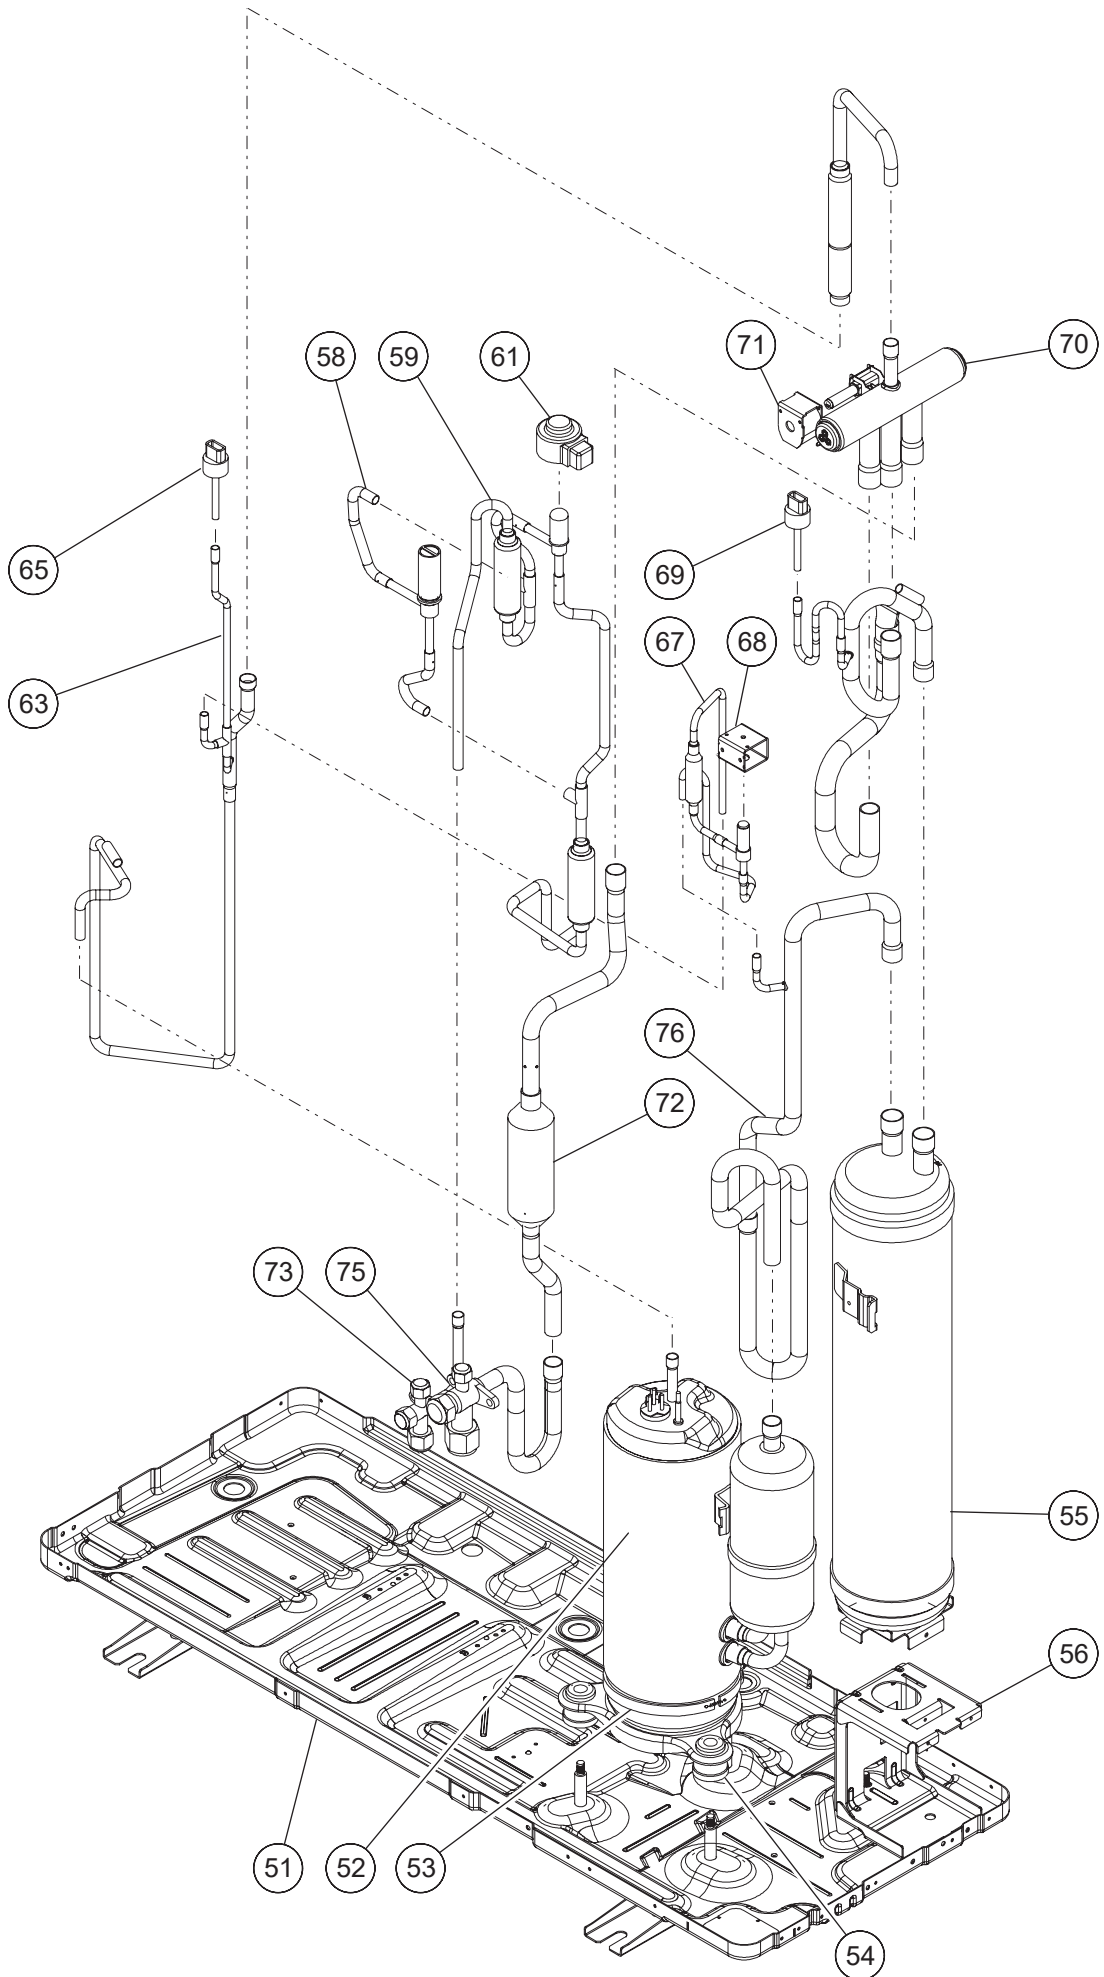

Models : AJY040LCLBH/ AJH040LCLBH
 AJY045LCLBH/ AJH045LCLBH
 AJY054LCLBH/ AJH054LCLBH

Ref No.	Description	Parts No.		
		AJ*040LCLBH	AJ*045LCLBH	AJ*054LCLBH
51	BASE ASSY	9379427067	9379427067	9379427067
52	COMPRESSOR	9810275004	9810275004	9810275004
53	BELT HEATER	9361140349	9361140349	9361140349
54	RUBBER MOUNT	9810059000	9810059000	9810059000
55	ACCUMULATOR SUB ASSY	9372700075	9372700075	9372700075
56	INSTALLATION PLATE(ACCUMULATOR)	9380471004	9380471004	9380471004
58	RERIEF VALVE ASSY	9380951001	9380951001	9380951001
59	EXPANSION VALVE ASSY	9378750111	9378750111	9378750111
61	COIL(EXPANSION VALVE)	9970163005	9970163005	9970163005
63	DISCHARGE PIPE TOTAL ASSY	9371581330	9371581330	9371581330
65	SENSOR (HP)	9970158001	9970158001	9970158001
67	SOLENOID VALVE ASSY	9380016038	9380016038	9380016038
68	SOLENOID (SV)	9970165009	9970165009	9970165009
69	SENSOR (LP)	9970159008	9970159008	9970159008
70	4-WAY VALVE	9970161001	9970161001	9970161001
71	SOLENOID (4-WAY VALVE)	9970110078	9970110078	9970110078
72	STRAINER ASSY	9380559009	9380559009	9380559009
73	3-WAY VALVE ASSY (LIQUID)	9381055005	9381055005	9381055005
75	3-WAY VALVE ASSY (GAS)	9315414045	9315414045	9315414045
76	SUCTION PIPE ASSY	9372514191	9372514191	9372514191
	COMPRESSOR COVER	9379647090	9379647090	9379647090
	COMPRESSOR COVER TOP	9380516019	9380516019	9380516019
	THERMISTOR ASSY (Discharge temp.+Comp. temp.)	9900811006	9900811006	9900811006
	THERMISTOR ASSY (Suction temp.+Heat ex. temp.)	9900507039	9900507039	9900507039
	THERMISTOR ASSY (Outdoor temp.)	9900747022	9900747022	9900747022