
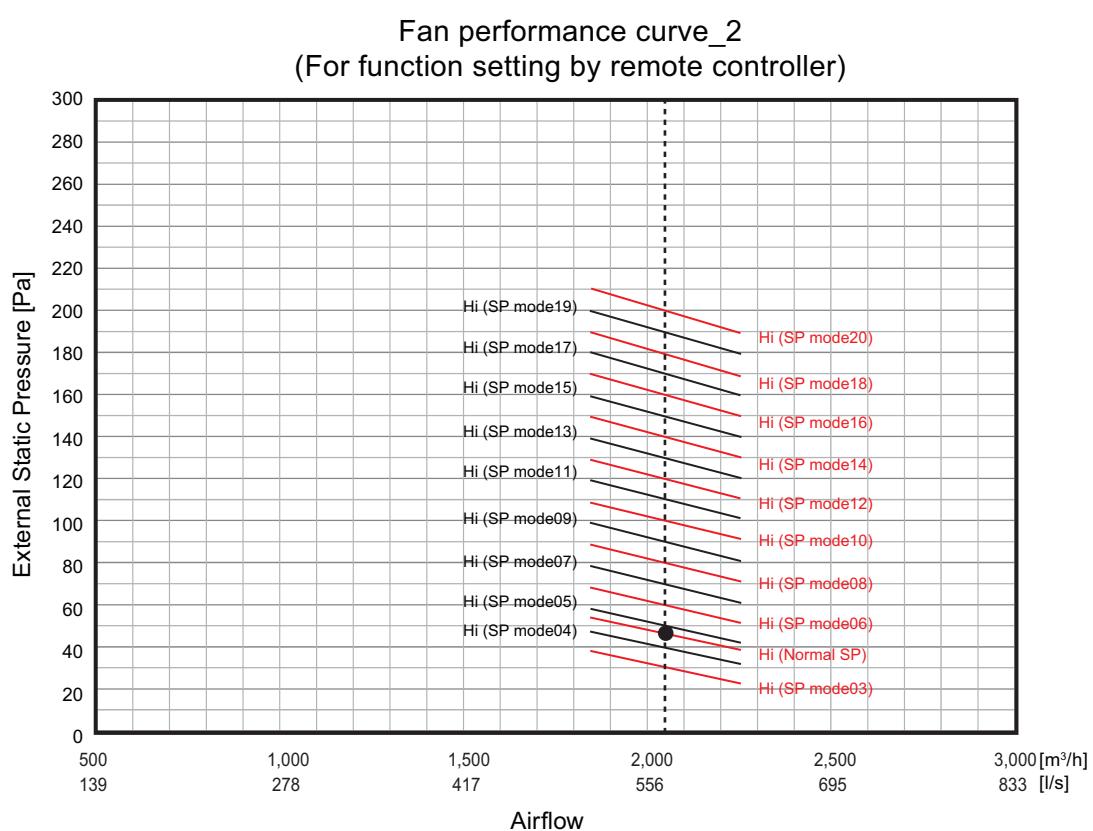


## ■ Model: ARXG36KHTAP

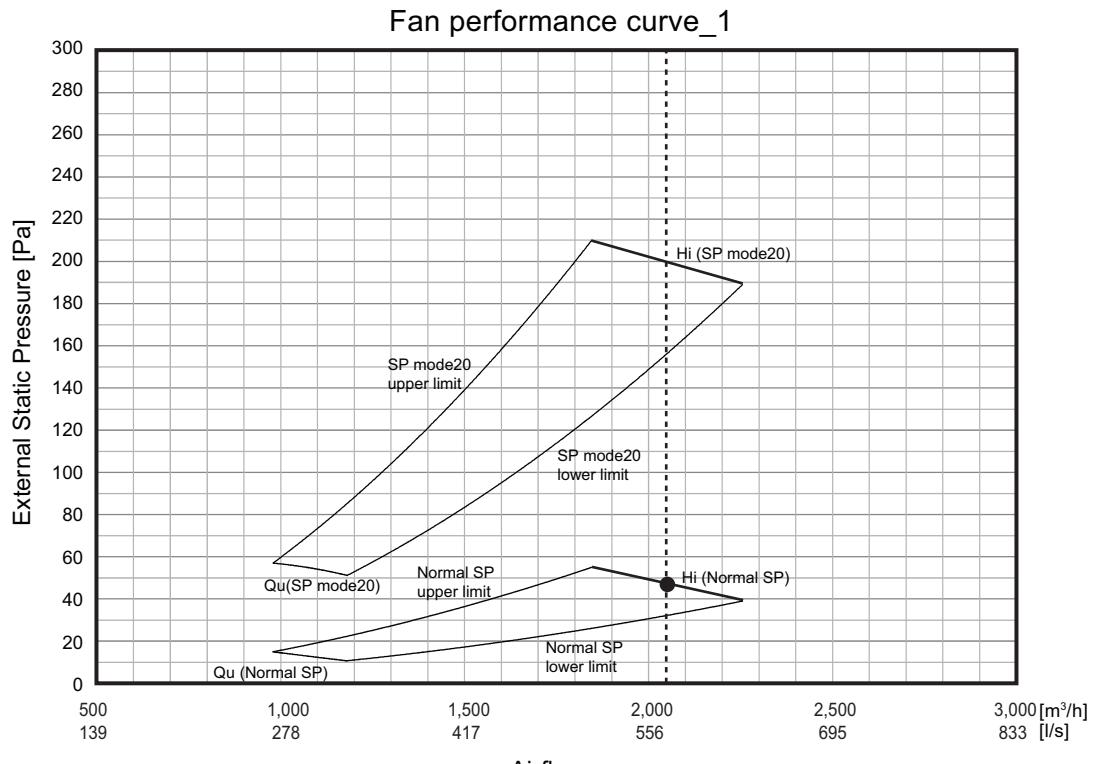


### NOTES:


- Setting of the external static pressure is switchable into modes by using the remote controller.
- According to the resistance of the connecting duct, perform the setting of the external static pressure with referring "Fan performance curve\_2" above.
- The default setting is set at "Normal SP".

## ● Characteristics of air volume and capacity

- Cooling

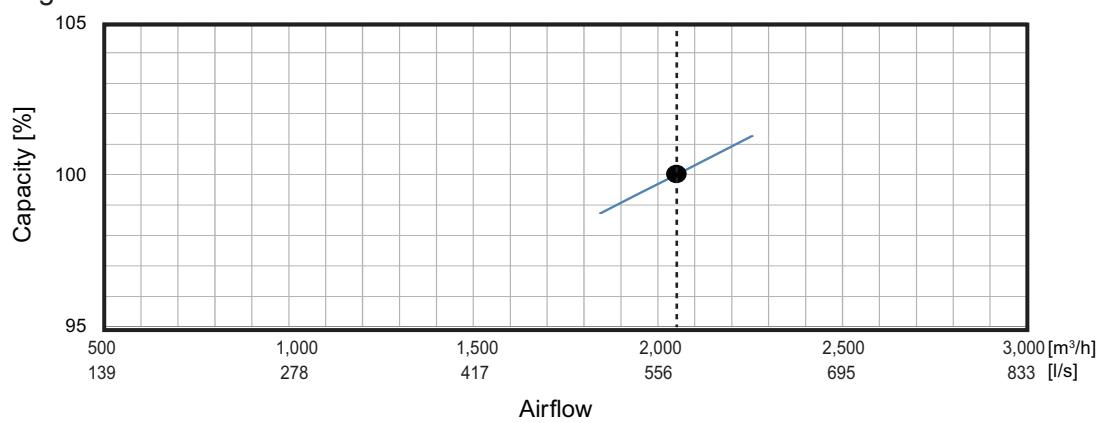

- Heating

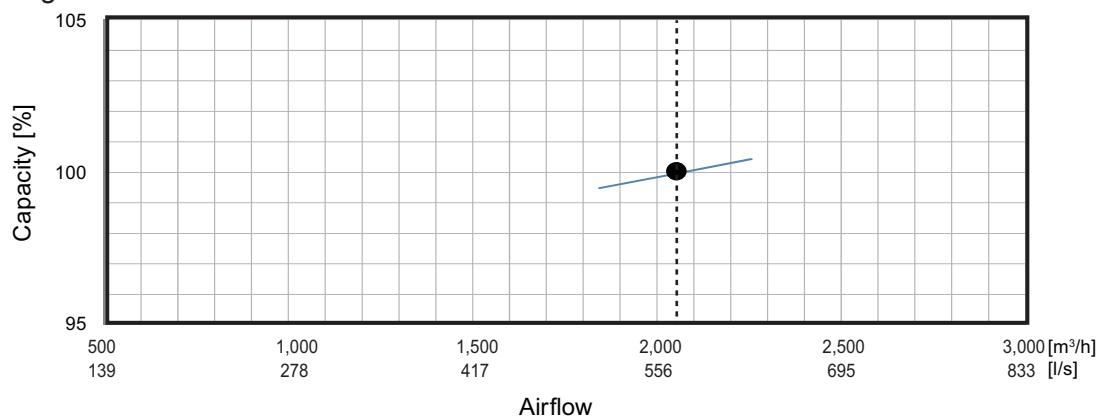

## ■ Automatic airflow adjustment procedures

1. To start the auto setting, use setting value 32 in function number 26.
2. Run the air conditioner on fan mode (High).
  - \* For instructions on how to operate the air conditioner, refer to the operation manual of the remote controller.
- During automatic airflow adjustment, the mode will be fixed at fan (High).
- When this function is active, do not operate the outdoor unit.
3. The air conditioner will run for about 1 to 8 min then stop automatically.
  - \* Do not change the throttles of the inlet and outlet ports during operation.
- When used in a group control system, the setting will take about 10 min.
4. Turn the air conditioner off and on again.
5. Check the setting value of function number 26.
  - \* If the setting value has not changed, repeat the procedure from step 2.

### ⚠ CAUTION

When the duct or outlet installations are changed after the Automatic airflow adjustment is completed, repeat the procedure from step 1.

## ■ Model: ARXG36KHTAP

### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	2,050
	l/s	569
	CFM	1,207
MED	m <sup>3</sup> /h	1,640
	l/s	456
	CFM	965
LOW	m <sup>3</sup> /h	1,330
	l/s	369
	CFM	783
QUIET	m <sup>3</sup> /h	1,070
	l/s	297
	CFM	630

### ● Heating

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	1,850
	l/s	514
	CFM	1,089
MED	m <sup>3</sup> /h	1,640
	l/s	456
	CFM	965
LOW	m <sup>3</sup> /h	1,330
	l/s	369
	CFM	783
QUIET	m <sup>3</sup> /h	1,070
	l/s	297
	CFM	630