


3. Dimensions

3-1. Models: ARYG72LHTA and ARYG90LHTA

Unit: mm

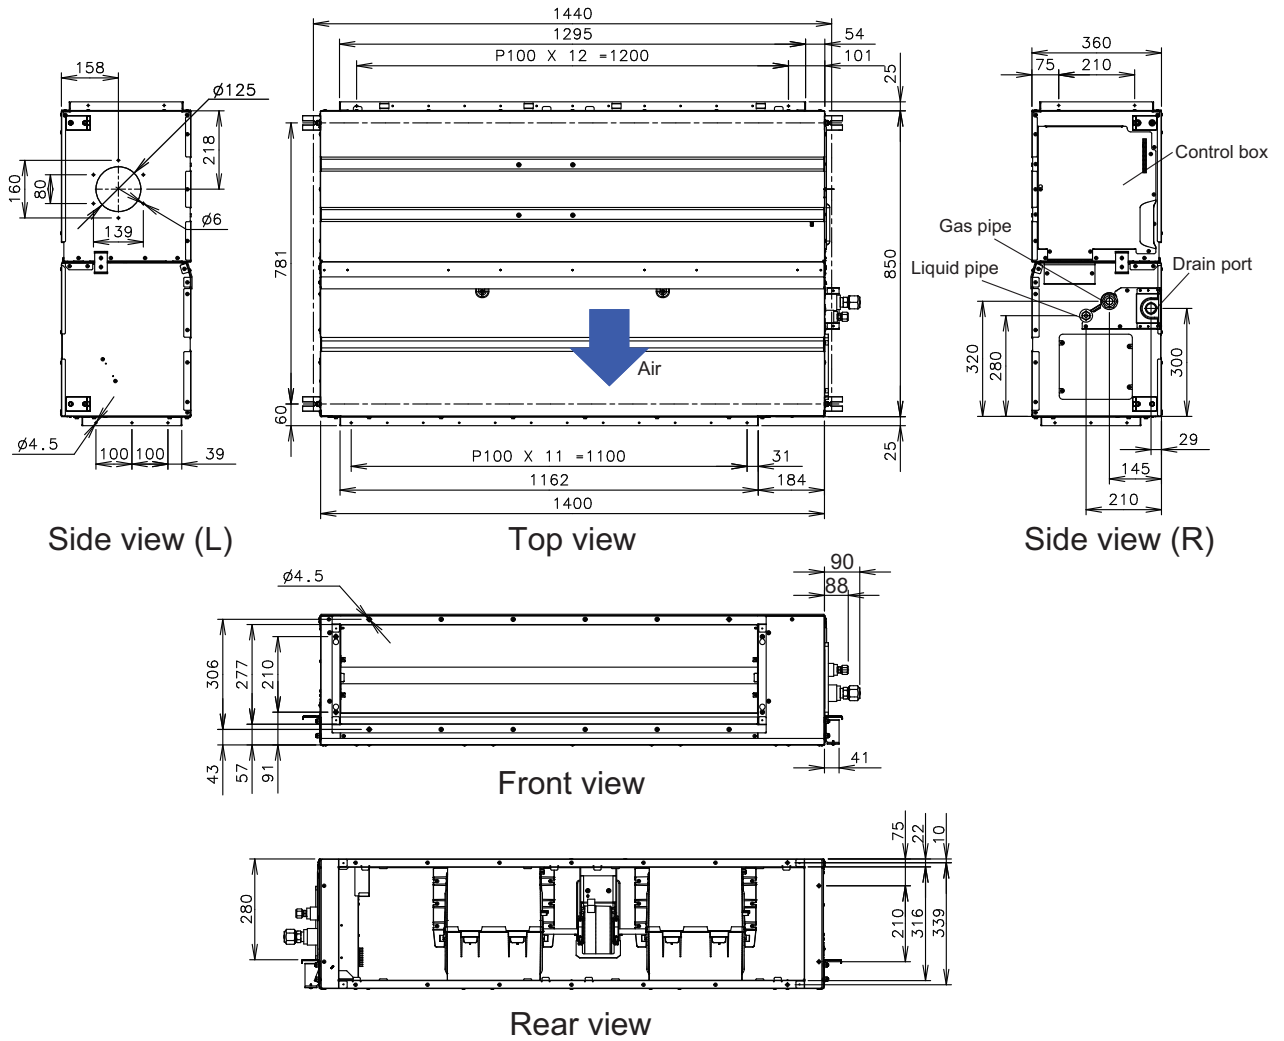


3-2. Installation space requirement


Provide sufficient installation space for product safety.

■ Models: ARYG72LHTA and ARYG90LHTA

- Installation by which service space is made on top of the unit (recommended):

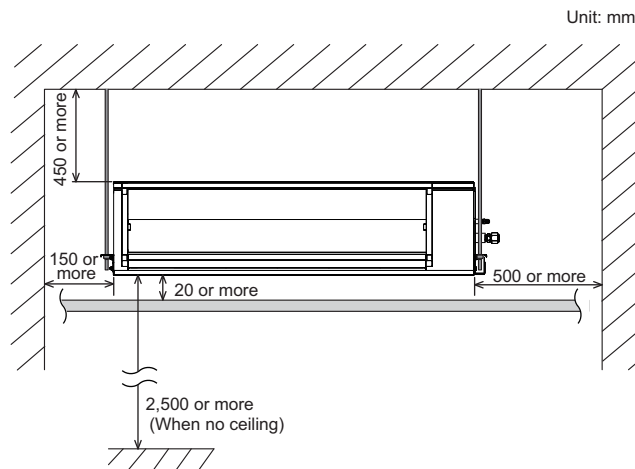

- Installation by which service is carried out from the bottom of the unit:

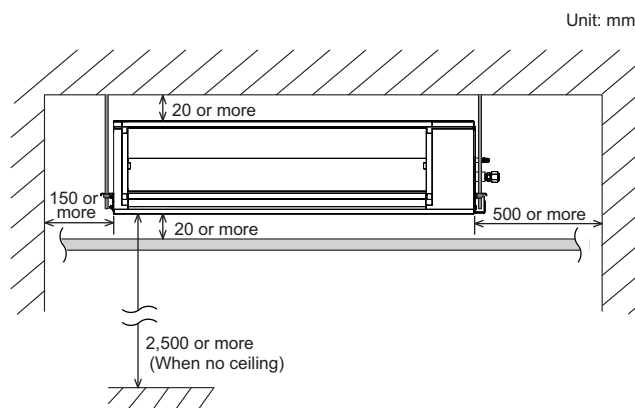

3-3. Maintenance space requirement

For future maintenance and service access, provide sufficient maintenance space.

NOTE: Do not place any wiring or illumination in the maintenance space, as they will impede service.

■ Models: ARYG72LHTA and ARYG90LHTA

