
 


 

 
 

 



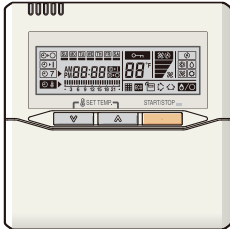 



11. Accessories

| Part name | Exterior | Q'ty | Part name | Exterior | Q'ty |
|--------------------------|------------------------------------------------------------------------------------|------|--------------------------------------|--------------------------------------------------------------------------------------|------|
| Operating manual |  | 1 | Cloth tape |  | 1 |
| Installation manual |  | 1 | Tapping screw (large), M4 × 25 mm |  | 5 |
| Wall hook bracket |  | 1 | Tapping screw (small), M3 × 12 mm |  | 2 |
| Remote controller |  | 1 | Air cleaning filter |  | 2 |
| Battery |  | 2 | Filter holder |  | 2 |
| Remote controller holder |  | 1 | Seal A (for 15 model) |  | 1 |

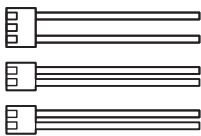 
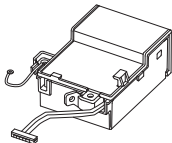 
12. Optional parts

12-1. Controllers

| Exterior | Part name | Model name | Summary |
|------------------------------------------------------------------------------------|--------------------------|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Wired remote controller | UTY-RVNYM | Large and full-dot liquid crystal screen, wide and large keys easy to press, user-intuitive arrow key. Wire type: Polar 3-wire |
|  | Wired remote controller | UTY-RNNYM | Room temperature can be controlled by detecting the temperature accurately with built-in thermo sensor. Wire type: Polar 3-wire |
|  | Simple remote controller | UTY-RSNYM | Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, temperature setting, and operation mode. Wire type: Polar 3-wire |

NOTE: Available functions may differ by the remote controller. For details, refer to the operation manual.

12-2. Others

| Exterior | Part name | Model name | Summary |
|-------------------------------------------------------------------------------------|----------------------|------------|---------------------------------------------------------------|
|  | External connect kit | UTY-XWZXZ5 | Required when external device is connected. |
|  | Communication kit | UTY-XCBXZ2 | Use to connect with optional devices and air conditioner PCB. |