

Auto Louver Grille OPERATING MANUAL

Safety Precautions

- The "SAFETY PRECAUTIONS" indicated in this operating manual contain important information pertaining to your safety. Be sure to observe them.
- For future use, such as relocating or repairing the unit, request the user to keep this manual together with the operating manual of the indoor unit.


⚠ WARNING	This mark indicates procedures which, if improperly performed, might lead to the death or serious injury of the user.
<ul style="list-style-type: none"> • This unit contains no user-serviceable parts. Always consult authorized service personnel for repairs. • When moving, consult authorized service personnel for disconnection and installation of this unit. • Do not repair or modify by yourself. It may cause failure or accident. • Never place fingers or foreign objects inside the outlet ports, and personal injury could be caused. 	<ul style="list-style-type: none"> • Be careful about the footing when handling or servicing the unit. Unstable footing may cause an injury due to toppling or falling of the unit. • When used in a room with infants, children, elderly or sick persons, the airflow direction and room temperature should be considered carefully when making settings.

⚠ CAUTION	This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user or damage to property.
<ul style="list-style-type: none"> • Do not wipe the unit with benzene, thinner or chemical cloths etc. Doing so may cause discoloration or malfunction. If the unit becomes extremely dirty, dampen a cloth with water-diluted neutral detergent and wipe the unit with it. 	<ul style="list-style-type: none"> • Do not hang objects from the grille. • Consult an authorized service personnel to remove the Grille from the wall. • Follow the Operating Manuals of the indoor units for usage precautions of air conditioners other than Grille.

- Perform the following operations after starting the unit.
- Stopping the unit would close the Up-down louvers.

Vertical Air Direction Adjustment

Vertical (up-down) airflow direction can be controlled by adjusting the Up-down louvers with remote controller of the indoor unit.

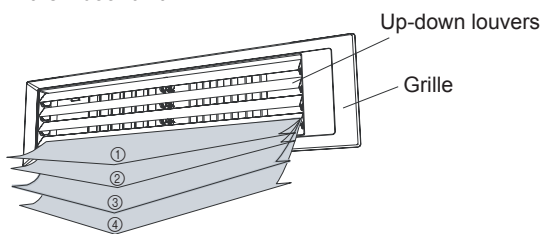

Cooling & Dry : ①* ② ③ ④
 Heating : ① ② ③ ④*

* Initial position when changing the operation mode

Always use the remote controller to adjust the Up-down louvers. Attempting to move them manually could result in improper operation; in this case, stop operation and restart. The louvers should begin to operate properly again.

Swing Operation

Swing Operation can be controlled with the remote controller of the indoor unit.

Swing : ① ⇄ ④

* Refer to the figure above for the values.

Horizontal Air Direction Adjustment

Horizontal (right-left) airflow direction can be manually set by adjusting Right-left louvers.

1. Whenever making horizontal airflow adjustments, start air conditioner operation and be sure that the Up-down louvers are stopped.
2. Move the Right-left louvers to adjust airflow in the direction you prefer.

